

# **INSTRUCTIONS**



A product by Scorpion Automotive Scorpion House, Drumhead Road, Chorley, Lancashire, PR6 7DE Tel: 01257 249 928 Web: www.scorpionauto.com



# 1. Arming / Disarming

Arm

Turning the ignition OFF and opening the door with the ignition OFF, arms the immobiliser (2 indicators blinks).

**Disarm** — Turn ignition ON or start the engine and enter PIN code.

#### 2. Service Mode

Turn the ignition ON and enter PIN code holding the last programmed button for 10 seconds (5 indicator's blinks). The immobliser will allow the vehicle to start normally without the PIN until the service mode is disabled. Disabling the service mode is achieved similarly to enabling it.

# 3. Change of buttons combination (new PIN code)

First, enter the previous PIN code - further steps as in the above section on PIN code setting.

### 4. Buttons combination setting (PIN code setting)

Procedure 1 -

With the ignition ON, push the accelerator pedal ten times (if the pedal is supported in the particular vehicle). Press the combination from the 1 to 15 supported buttons. Turning the ignition OFF saves the new PIN code. Failing to turn the ignition off within a 5 second window will result in the entered combination being ignored. Successful entry of a PIN sequence is indicated by the dashboard'sindicator blinking twice. The specific indicator used is shown in the vehicle compatibility list.

Procedure 2 -

With the ignition ON, put the 11999 program number using the switch placed on the PCB - further steps, like in Procedure 1.

## Keep your PIN code safe

Make a note below for future use

l .			



