




UNLOCKING THE IMMOBILISER WITH AN EMERGENCY CODE

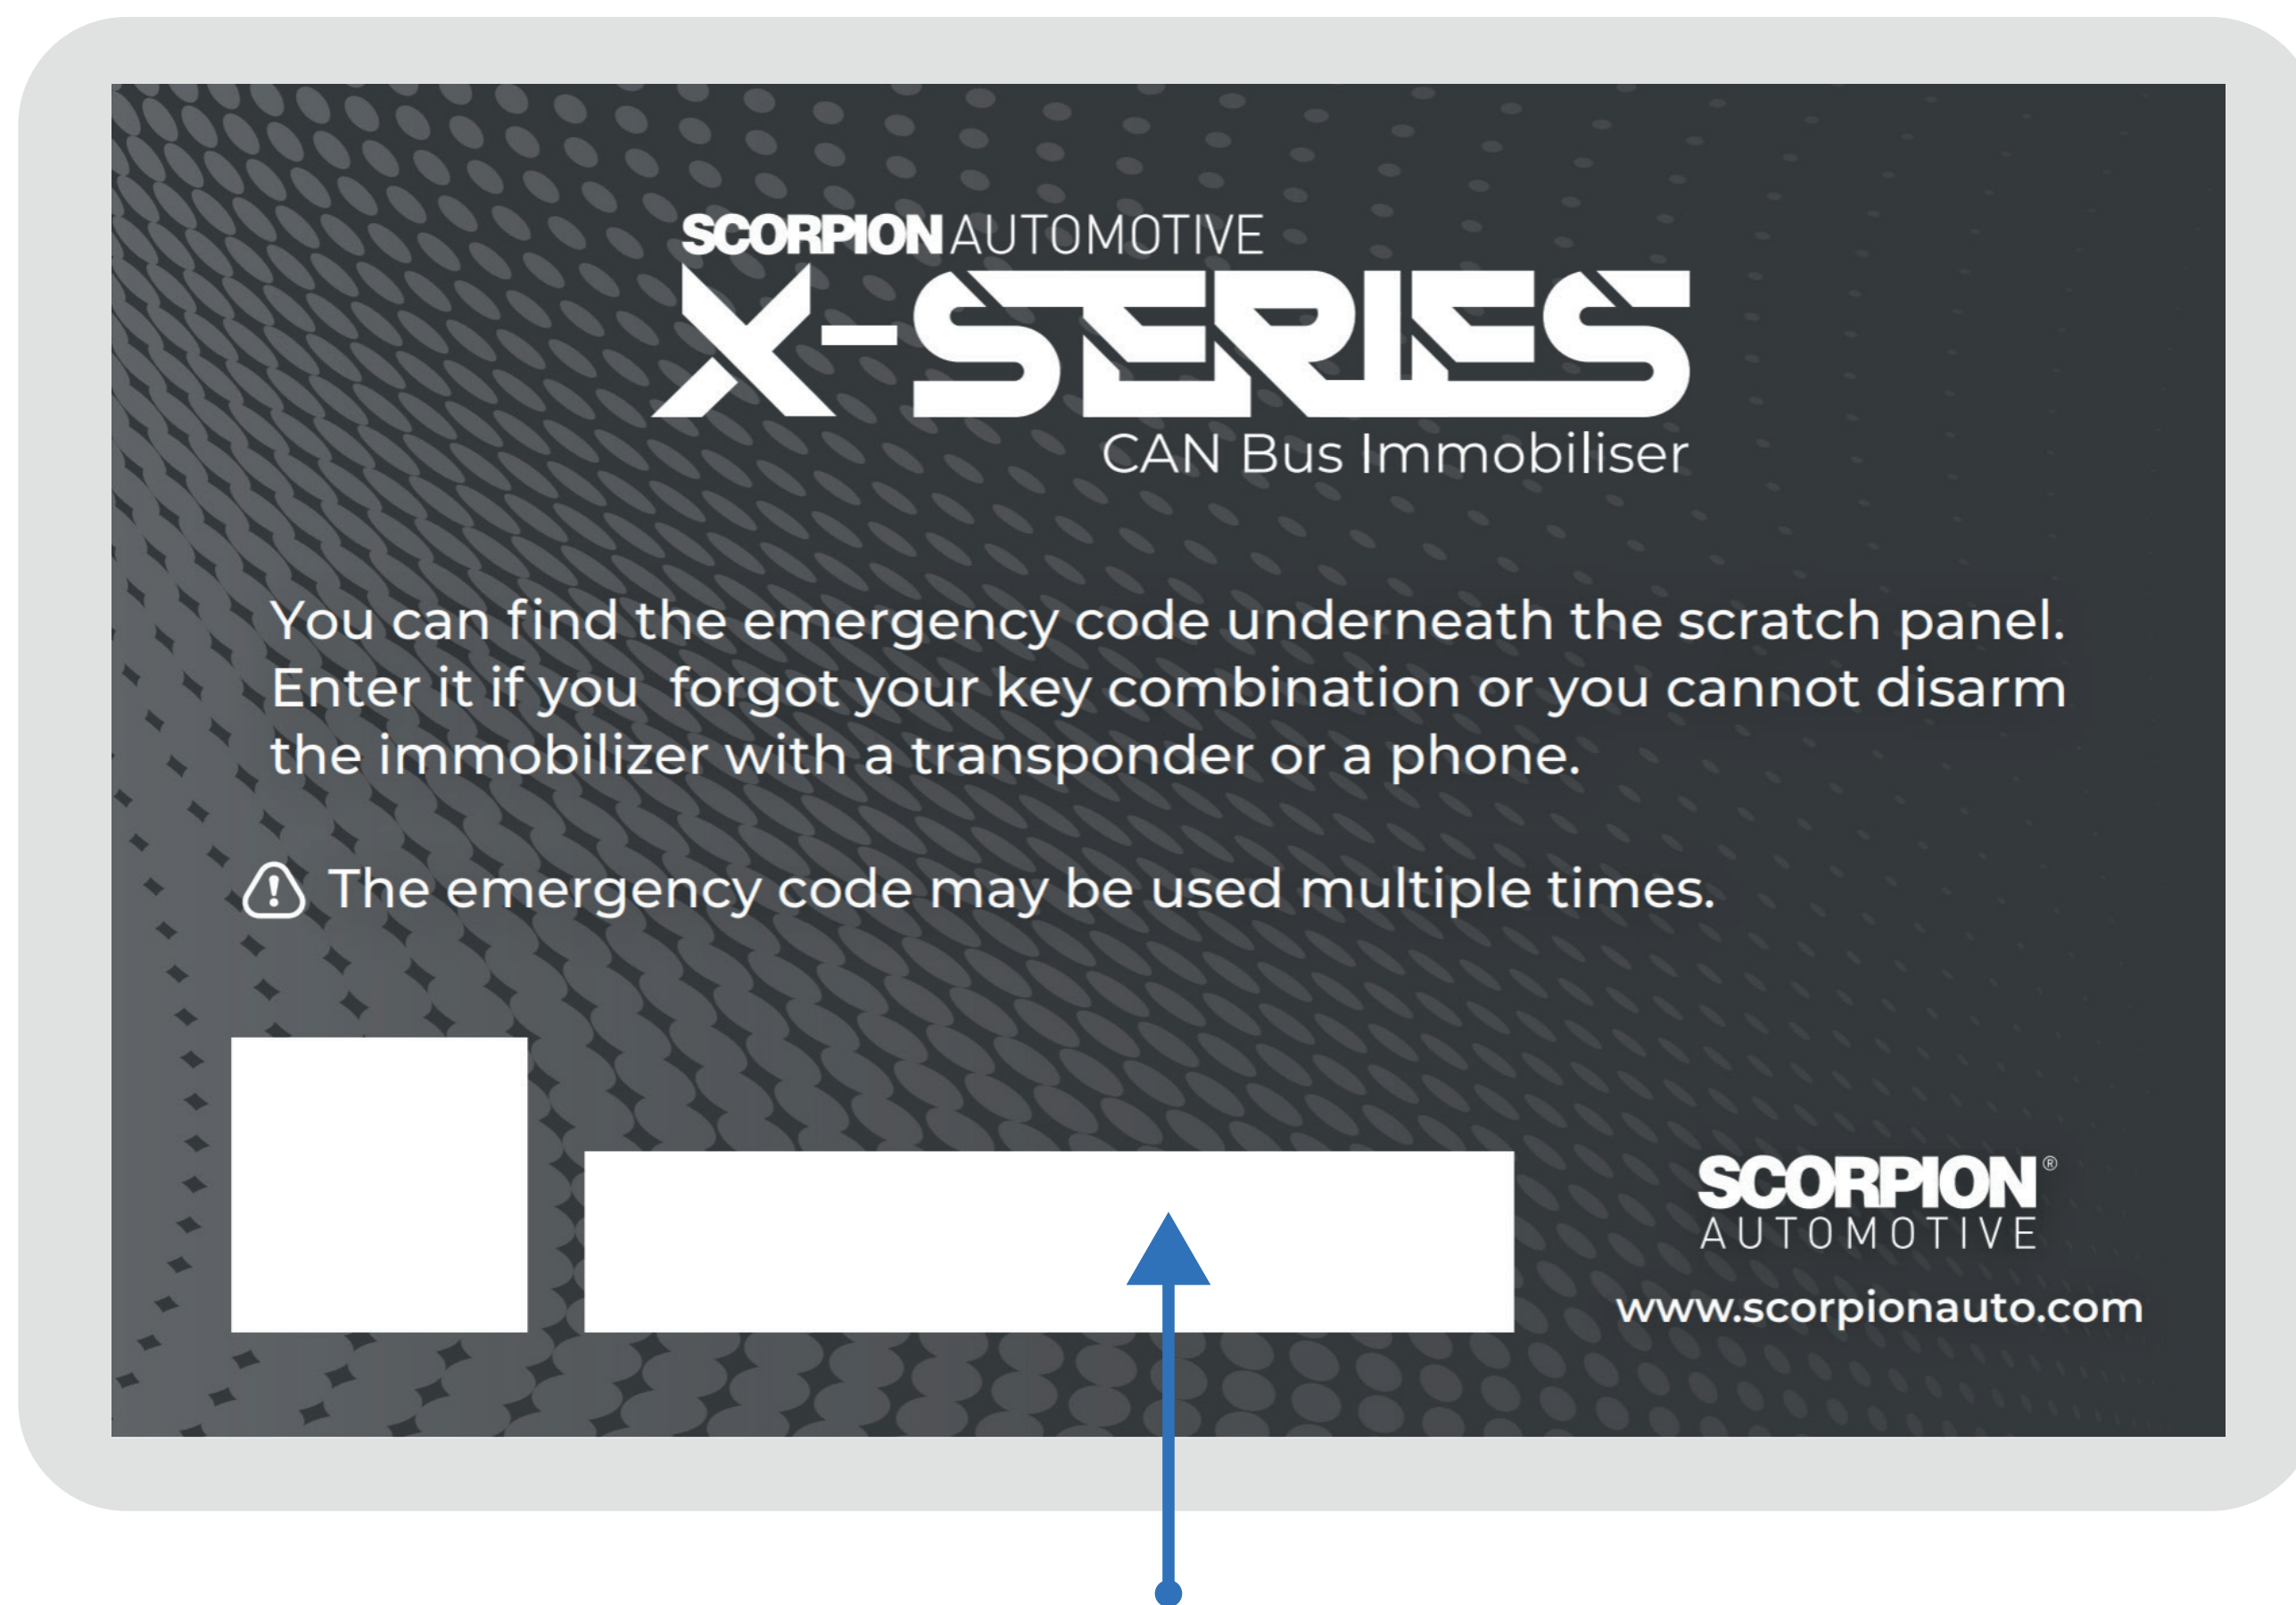

**YOU CAN FIND THE EMERGENCY CODE
UNDERNEATH THE SCRATCH PANEL**

**IF YOU HAVE FORGOTTEN YOUR PIN CODE AND CAN NOT DISARM THE IMMOBILISER,
ENTER YOUR EMERGENCY PIN CODE FOUND ON THE X-SERIES EMERGENCY PIN CARD.**



Unlocking the immobiliser with an emergency code does not work in vehicles where the immobiliser prevents the ignition from being switched on. Please contact your installer.



To unlock the vehicle with the emergency code, the immobiliser must be armed



The emergency code can be used multiple times


INSTRUCTIONS




Turn on the ignition. You must start entering the emergency code within 10 seconds.



Press the brake pedal and while holding it press the accelerator pedal the appropriate number of times for the first digit.

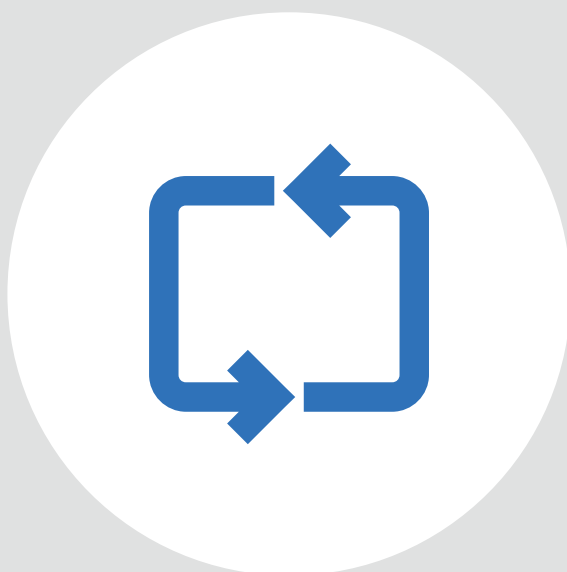

After entering the first digit, release the brake, then press and hold it again and enter the next digit - repeat this process for each digit of the emergency code.

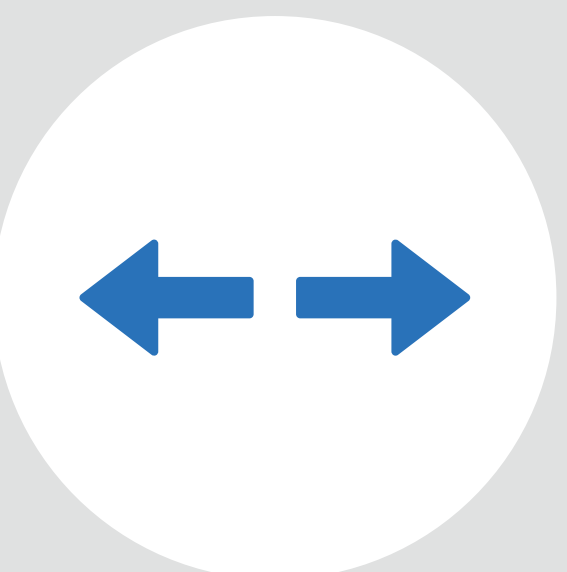

After correctly entering all 6 digits of the emergency code, the indicator light will blink 3 times indicating that the device is reset to factory setting, that means:

The device will not immobilise the vehicle until a new button combination is set. This should be done in accordance to the procedure described in the user manual

PLEASE CONTACT US IF YOU NEED ANY FURTHER ASSISTANCE

01257 249 928
sales@scorpionauto.com
www.scorpionauto.com

Scorpion Automotive
Scorpion House, Drumhead Road,
Chorley, Lancashire, PR6 7DE.